





MANUAL DE USUARIO

www.primux.es

Español / English

Contenidos	C
Consejos de uso	30
1. Apariencia	3
2. Botón de encendido	3
3. Pantalla táctil	4
4. Adaptador	4
5. Tarjeta TF	5
6. Comenzar	5
Cargar la batería	5
Manejo de la batería	33
Comenzar	34
Ajustes de red Wi-Fi	34
7. Escritorio	8
8. Bloqueo de pantalla	<u>ç</u>
9. Programas	10
10. Escritorio y funciones del menú	12
11. Administrador de programas	12
Instalar programas	40
Descargar aplicaciones directamente de internet	40
Desinstalar una aplicación	41
12.Grabadora	14
13. Reloj	15
Alarma	42
14. Descargas	16
15. Navegador	16
16. Calendario	17
Nuevo evento	45
17. Cámara	17
18. Calculadora	18
19. Correo electrónico	19
20. Administrador de archivos	21
Copiar archivos entre el ordenador y el dispositivo	21
Eliminar archivos	21
21. Música	22
22. Vídeos	23
23. Galería de imágenes	23
24. Mapas	24
25. Búsqueda local	24
26. Google Play	25
27. Ajustes	25
Apéndice: accesorios opcionales y modelos	28

Consejos de uso

Cuando utilice el dispositivo, por favor tenga en cuenta los siguientes consejos

básicos de seguridad. Estas advertencias reducirán los incendios, las descargas eléctricas y los riesgos de lesión:

- No deje que el producto se humedezca bajo la lluvia.
- Por favor mantenga el dispositivo alejado de la luz solar directa y los objetos de calor.
- Proteja el cable de alimentación. Cuando se conecte el cable de alimentación, no deje que se pise o se coloquen objetos encima. Preste atención a la protección de los equipos de conexión.
- Utilice el adaptador de corriente original para cargar su dispositivo; cualquier otro podría dañarlo.
- No desmonte el equipo ni intente repararlo usted mismo.

Limpieza del dispositivo

• Toque la pantalla con cuidado. Para limpiar las huellas o el polvo en la pantalla, es mejor usar un paño suave para instrumentos como la cámara. No usar algodón para limpiar el polvo.

1. Apariencia



2. Botón de encendido

Encender: mantenga pulsado el botón de encendido durante 3 segundos.

Apagado : mantenga pulsado el botón de encendido durante 3 segundos →seleccione apagar.

Bloqueo/desbloqueo de pantalla : pulse el botón de encendido para bloquear o desbloquear la pantalla.

Apagado forzoso: Si el dispositivo no responde, mantenga pulsado el botón de encendido durante 6 segundos para apagarlo.

Advertencia: Sólo en casos excepcionales y en emergencias, el apagado del dispositivo debe realizarse con normalidad de acuerdo con las instrucciones previas. **Botón de** *reset*: Al pulsar el botón de reset, el dispositivo se apagará. Para volver a utilizarlo, sólo tendrá que encenderlo de nuevo.

3. Pantalla táctil

Lea las siguientes instrucciones para un buen manejo de la pantalla táctil:

Pulsar: Pulse en cualquier icono de la pantalla.

Pulsar y mantener: Mueva cualquier icono por la pantalla. **Pulsar y mover:** Mueva un icono por diferentes pantallas.

★ Para proteger la pantalla, no coloque ningún objeto encima del dispositivo.

4. Adaptador

Antes de utilizar un dispositivo USB, conecte el cable a su ordenador.



Cable USB

Disco duro

Conecte su disco duro con su cable OGT.

☆ No inserte su disco duro con frecuencia o se dañará.

5. Tarjeta TF

★ El dispositivo es compatible con tarjetas de memoria de hasta 32 GB. Inserte la tarjeta en el lector; presione con los dedos para introducirla correctamente; la pantalla mostrará un cuadro que indica que se está leyendo la tarjeta SD; cuando esté lista para usarse, el cuadro desaparecerá.

Retirar tarjeta TF

Cierre todos los programas o documentos abiertos de la tarjeta. Pulse



 \rightarrow Tarjeta de memoria y memoria del dispositivo \rightarrow Retirar tarjeta.

Presione con los dedos para expulsarla correctamente.

- ★ No inserte/retire la tarjeta de memoria de forma reiterada; en caso contrario, esta podría verse dañada.
- ★ Por favor, utilice tarjetas cualificadas para evitar incompatibilidades con el dispositivo.

6. Comenzar

Carga de la batería

Conecte un extremo del cargador a la toma de corriente y el otro a la ranura correspondiente del dispositivo.

Durante la carga, el símbolo de la batería será :; cuando la carga se haya completado, el icono cambiará a .

- ★ Puede usar también un cable USB para cargar el dispositivo.
- ★ Puede utilizar el dispositivo mientras lo carga; sin embargo, extenderá el tiempo de carga.

Manejo de la batería

La batería no está cargada totalmente cuando se abre por primera vez. Le recomendamos que cargue completamente la batería durante al menos 4 horas antes de utilizar su dispositivo.

La duración de la batería depende del número de veces que se haya cargado y descargado. Sin embargo, puede seguir los siguientes consejos para una mayor duración:

- Usar el dispositivo al menos una vez por semana.
- Cargar totalmente y de forma regular.
- No dejar la batería sin carga durante mucho tiempo.
- Mantener siempre lejos del calor el dispositivo y la batería.

Encender el dispositivo

Pulse el botón de encendido durante al menos 5 segundos.

Configuración de una red Wi-Fi

Configure una red Wi-Fi en su dispositivo antes de comenzar a usarlo, ya que muchos de los programas que incluye están destinados a uso *online*.



- 1. Pulse el botón \rightarrow Ajustes \rightarrow Conexiones inalámbricas y redes.
- Seleccione primero activar Wi-Fi y elija la red a la que desea conectarse por medio de Ajustes Wi-Fi. Si se muestra en una de las redes Wi-Fi, tendrá que introducir la contraseña correspondiente a la red que elija.
- 3. Seleccione su red Wi-Fi→ Introduzca la clave si es necesario→ haga clic en el enlace que aparece.
- 4. Seleccione el botón de Inicio (HOME) para volver al escritorio.
- 5. Si su red inalámbrica no aparece, seleccione agregar red Wi-Fi y cubra la información necesaria para configurarla.

Herramientas 3G

1. El dispositivo solo es compatible con dispositivos USB 3G externos.. La



lista de redes 3G compatibles se puede consultar en inalámbricas y redes \rightarrow Más \rightarrow 3G support.

→ Conexiones

This device can support below 3G Doogles:

Doogle List:

WCDMA:
HuaWei E230, HuaWei E176G, HuaWei E160E, HuaWei E182G, HuaWei E1782, HuaWei E1750, ZTE MF633B-1, ZTE MF633, ZTE MF637U, HuaWei E1756, HuaWei UMG1691.

CDMA2000/EVDO:
HuaWei E150, Huawei EC1261, HuaWei EC122, Huawei EC156, HuaWei EC1270, ZTE AC580, ZTE AC2736, ZTE AC2746.

Usage:
Just insert the available 3G Doogle, and it will automatically dial-up.

- 2. Después de instalar la tarjeta SIM en la clavija 3G, instale el NIC 3G a través de un cable USB y conéctelo al dispositivo.
- 3. Después de conectarse a una red 3G NIC, pulse → Conexiones inalámbricas y redes→ Más → Red móvil para realizar los ajustes necesarios.


 4. Encienda la red móvil y seleccione Permitir el flujo de datos → seleccione un
- Encienda la red móvil y seleccione Permitir el flujo de datos → seleccione un punto APN, Menú: crear nuevo punto de acceso APN para internet.

Conéctese a una red 3G después de configurarla; aparecerá el símbolo pantalla después de haberse conectado a una red 3G.

o en la

Si el símbolo aparece en gris, se estará escaneando; el símbolo azul indica que la red 3G está conectada, y el símbolo acceptado de la indica que se están transmitiendo datos.

7. Escritorio

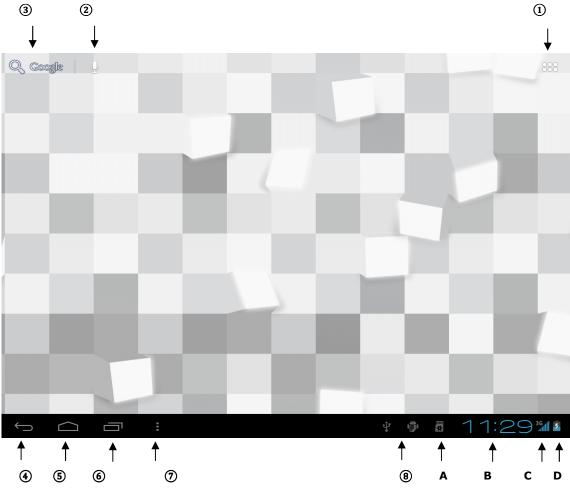

- 1. Aplicaciones
- 2. Visión rápida del navegador
- 3. Volver al ultimo interfaz
- 4. Volver al escritorio desde una aplicación
- 5. Seleccionar una clave para las páginas que elijas
- 6. Conexión USB
- 7. Hora local
- 8. Estado de la batería

A: Estado conexión tarjeta TF

B: Hora actual

C: Símbolo conexión 3G/Wi-Fi


D: Estado de la batería.

- ☆ Haga clic en cualquier programa o aplicación para abrirla.
- ☆ Mantenga pulsado el icono y arrástrelo, muévalo a cualquier parte de la pantalla.



☆ Mantenga presionado el icono y arrástrelo a la papelera para eliminarlo del escritorio.

8. Bloqueo del dispositivo

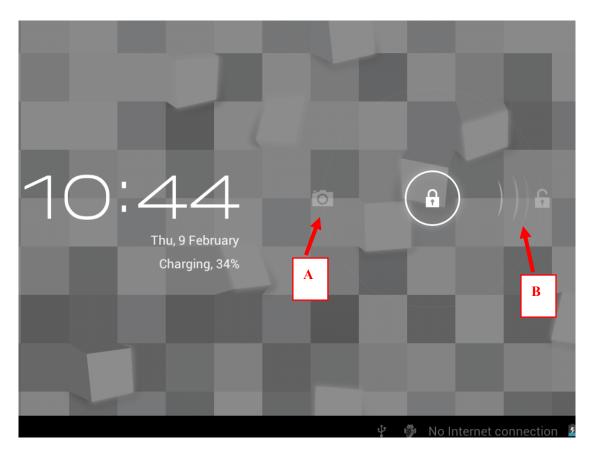

Si lleva mucho tiempo sin usar su dispositivo o poco tiempo sin pulsar el botón de encendido, se activará el modo Reposo. Hay dos modos de hibernación: el primero es una hibernación prolongada, de forma que la pantalla del dispositivo

se apaga, y será necesario presionar el botón para acceder a la pantalla en Reposo. Como en el ejemplo de la imagen superior, pulsando el botón rojo de desbloqueo, aparecerá un círculo en el centro. Después aparecerá una pequeña luz en la pantalla presione el botón de desbloqueo y moverlo hacia el círculo, por ejemplo punto B. Después de esto, la pantalla se desbloqueará.

9. Programas

Gravador de som	Grabadora	Graba sonidos externos
Clock	Reloj	Muestra la hora y la configuración
Downloads	Descargas	Instale rápidamente las aplicaciones de
Browser	Navegador	Conéctese a Internet a través del ordenador
Calendar	Calendario	Configuración de su calendario
Camera	Cámara	Realice fotografías o vídeos
- + Calculator	Calculadora	Realice operaciones básicas
Email	Correo electrónico	Reciba y envíe correos
File Manage	Administra dor de archivos	Visualice y gestione sus archivos

Music	Música	Reproduzca y administre archivos de audio
Media Player	Vídeo	Reproduzca y gestione sus vídeos
Gallery	Galería	Reproduzca y gestione sus imágenes
Maps	Mapas	Compruebe su localización actual cuando esté conectado a internet
Places	Búsqueda local	Busque lugares de interés cercanos a su posición actual
Play Store	Google Play	Identifíquese para descargar aplicaciones, juegos,
Search	Buscar	Busque en el dispositivo lo que necesite
Settings	Ajustes	Configure los parámetros que considere necesarios


- ★ Mantenga pulsado para mover el icono de la aplicación.
- ★ Mantenga pulsado el icono y arrástrelo hacia para borrarlo de menú.

10. Funciones del menú

En el escritorio, pulse la tecla del Menú



que le mostrará la lista de opciones



y lleve a cabo la operación que desee.

11. Administrador de programas

Instalación de programas

☆ Puede encontrar algunas aplicaciones Android muy interesantes. Sólo tiene que abrir el navegador y buscar "Aplicaciones Android" para saber cuáles están disponibles. Las aplicaciones Android que compra o descarga se pueden instalar en el dispositivo.



☆ Las aplicaciones Android que descargue se guardarán en l

instalarlos con facilidad:

1. Copie el archivo .apk que quiere instalar en la tarjeta SD o en la memoria, o instale las aplicaciones en el dispositivo por medio del



software de terceros.



- y encuentre la carpeta, que incluye los 2. Haga clic en archivos .apk
- 3. Elija un archivo **.apk** → instalar. Las aplicaciones se instalarán y el icono de la aplicación aparecerá en el interfaz de **Aplicaciones**.



4. Haga clic en el icono para ejecutar o finalizar la aplicación

Descargar programas directamente desde la red

Puede descargar aplicaciones Android directamente e instalarlas en el dispositivo de forma rápida y conveniente.

- 1. Haga clic en para buscar las aplicaciones Android en internet.
 - 2. Introducir la dirección web, seleccione el enlace para descargar la aplicación.
 - 3. Al terminar la instalación, mantenga pulsada la aplicación (se guarda en el historial de descargas). → Haga clic y seleccione abrir→ instalar.

Conectar al PC y guardar archivos

- 1. Conectar la Tablet con el PC a través de un cable USB. Un extremo es el puerto USB OTG, y el otro, el puerto USB del PC.
- 2. Después de conectarlo, aparecerá en la pantalla la siguiente imagen. Seleccione y ejecute



Desinstalar una aplicación

Puede desinstalar aplicaciones Android rápidamente.

- 1. Pulse la tecla de Menú \to Ajustes \to Aplicaciones \to Administrar aplicaciones.
- 2. Seleccione una aplicación → **Desinstalar.**
- 3. Pulse OK para desinstalar.

12. Grabadora



Haga clic en el icono de grabadora . Aparecerá la siguiente pantalla:



- Haga clic en para empezar a grabar, seleccione para detener la grabación, o pulse para visualizar las notas de voz guardadas.
- Los archivos se nombrarán automáticamente de acuerdo al momento en que los haya grabado.
 - Seleccione la nota de voz que desea modificar y haga clic en para realizar los ajustes que desee.



Haga clic en el icono del reloj

. Puede ver la fecha y hora actuales.

Despertador

- **1.** Se pueden instalar diferentes alarmas en el dispositivo.
- 2. Cuando aparezca el icono en la parte superior de la pantalla, significa que al menos tiene configurada una alarma.

Añadir una nueva alarma



- 1. Haga clic en el icono
- 2. Haga clic en el menú→ añadir alarma
- 3. Configure una nueva alarma
- 3. Si no has configurado la repetición, la alarma no se repetirá y se borrará la información. La alarma sólo sonará una vez.
- 4. Haga clic para empezar a usar su alarma.

Detener el sonido de la alarma

- 1. Cuando llegue la hora a la que puso el despertador, aparecerá la pantalla del despertador en su dispositivo.
- 2. Si quiere que suene cada diez minutos, puede seleccionar en la pantalla para posponer la alarma de nuevo.
 - 3. Haga clic en **Cancelar** para detener el despertador...
 - 4. Inicie el despertador
- 5. La alarma que se h configurado como despertador (y que se repetirá cada diez minutos), se cancelará de forma temporal, pero no estará eliminada.
- 6. En el interfaz del despertador, seleccione el icono si quiere empezar a usar la alarma,
 - 7. Haga clic en el icono 🎮 para restablecer.

Editar alarma



- 1. Haga clic en el icono de reloj
- 2. Seleccione la alarma que guiera editar


Borrar alarma



- 2. Seleccione la alarma que desee eliminar y, a continuación, confirme.
- 3. Seleccione la alarma eliminada.

Seleccione para volver al escritorio.

14. Descargas




- 1. Haga clic en el icono
- 2. Visualice las aplicaciones descargadas recientemente en el ordenador; seleccione e instale.

15. Navegador

Puede conectarse a internet a través del navegador. Haga clic en el icono del navegador para acceder a internet:



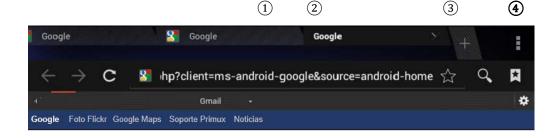





- ①: Página anterior; seleccionar para visualizar; ②: Página actual; ③: Añadir web;
- (4): Tecla de menú

16. Calendario



- ☆ Haga clic en el icono de calendario l
- ★ La primera vez que use el calendario, tendrá que agregar una cuenta de correo electrónico. Rellene los campos de cuenta y contraseña. Seleccione Siguiente, y tras configurar su correo electrónico ya podrá usar el calendario.

Nuevo evento

- 1. En la interfaz del calendario, seleccione en el día que desee **Nuevo evento** para crear uno nuevo.
- 2. Seleccione tiempo de actividad y rellene con los detalles relevantes de la actividad en cada campo.
- 3. Seleccione Listo.
- ☆ Días que aparecen en gris → no hay nada destacado en el día.

17. Cámara



Realizar fotografías

- 3. Haga clic en el icono para realizar una foto
- 4. Las imágenes se guardarán.
- 5. Haga clic en el botón para acceder a la galería de imágenes.
- 6. Haga clic en el icono de retroceder para volver a usar la cámara.


- 7. Haga clic en el icono para realizar los ajustes de fotografía que desee.
- 8. Haga clic en el icono para retroceder y cerrar la cámara.

Grabadora de vídeo

- 1. Haga clic en el icono para abrir el vídeo.
- 2. Haga clic en para comenzar a grabar. Seleccione para borrar el vídeo.
- 3. El vídeo se guardará.
- 4. Haga clic en para acceder a los vídeos.
- 5. Haga clic en el icono para volver a la cámara.
- 6. Haga clic en para realizar los ajustes de vídeo que desee.
- 9. Haga clic en el icono para retroceder y cerrar la cámara.

Nota: antes de usar la cámara inserte la tarjeta de memoria.

18. Calculadora



- 2. Pulse en los diferentes iconos para realizar las operaciones que desee.
- 3. Haga clic en Eliminar para borrar todas las pantallas.

19. Correo electrónico

★ Admite cuentas POP3 y SMTP.

Añadir una cuenta de correo electrónico

Puede agregar una o varias cuentas de correo electrónico a su dispositivo.



- 1. Haga clic en el icono
- 2. En la interfaz de cuentas, haga clic en Siguiente.
- 3. Seleccione Opciones de correo electrónico→ introduzca su correo electrónico.
- 4. En las opciones de contraseña → introduzca su contraseña.
- 5. Haga clic en OK.
 - ☆ Configuración manual (opcional): los ajustes del servidor están establecidos de acuerdo a la configuración automática de su cuenta GMAIL. Si fuera necesario cambiar la configuración de los servicios, haga clic en los ajustes manuales y realice los cambios que sean oportunos.
- 1. Haga clic en Siguiente.
- 2. Opcional: introduzca el nombre de la cuenta.
- 3. Introduzca el nombre para enviar mensajes y haga clic en Aceptar.
 - ☼ Después de realizar los ajustes necesarios, si no puede conectarse a su cuenta de correo electrónico, por favor póngase en contacto con sus proveedores de correo electrónico para confirmar su servidor de apoyo (POP) y su acuerdo de transmisión (SMTP).

Bandeja de entrada



- 1. Haga clic en el icono
- Si solo añade una cuenta de correo electrónico, se abrirá rápidamente.
 En caso contrario, la aplicación tardará unos pocos segundos más en abrirse.
- Haga clic en la cuenta de correo electrónico que quiera abrir→ Seleccione
 Bandeja de entrada.

Abrir el correo electrónico

- 1. En la Bandeja de entrada, haga clic en el email y ábralo.
- 2. Seleccione Abrir o Guardar si desea que se almacene en su tarjeta de memoria.
- 3. Para contestar, seleccione Responder o Responder a todos.
- 4. Seleccione Eliminar para borrar un email.

Redactar un nuevo correo electrónico

- 1. Seleccione Redactar. Haga clic en *Para* y escriba la dirección de correo electrónico.
- 3. Si fuera necesario, haga clic para añadir asunto.
- 2. Una vez que haya terminado de escribir el correo electrónico, seleccione Enviar.

Editar una cuenta de correo electrónico



- 1. Seleccione el icono
- 2 Elija "Configuración de Cuentas" en el Menú.

Eliminar cuenta de correo electrónico

☆ Si borra los ajustes de la cuenta de correo electrónico predeterminada, se activará automáticamente el siguiente correo electrónico que aparezca en su lista.

Establecer correo electrónico predeterminado

Es necesario establecer una cuenta de correo electrónico como predeterminada, de forma que si dispone de múltiples cuentas de correo electrónico, puede elegir cualquiera de ellas como tal.



- 1. Seleccione el icono de **Correo electrónico**
- 2. En el interfaz de **Bandeja de entrada** seleccione MENÚ ightarrow ajustes de correo electrónico.
- 3. Selecciona la cuenta predeterminada.

20. Administrador de archivos

• Seleccione el icono para visualizar sus archivos (Almacenamiento interno de su Tablet PC, tarjeta SD, dispositivo de almacenamiento externo USB).

El administrador de archivos tiene las siguientes funciones:



Ajustes de almacenamiento interno



Tarjeta SD



Memoria USB (es necesario cable USB)



Volver a la última carpeta



Crear una nueva carpeta



Configuración de archivos



Imágenes

Copiar archivos entre el ordenador y el dispositivo

Puede copiar archivos desde un dispositivo de almacenamiento externo a su ordenador. Si necesita copiar archivos desde su Tablet, antes será necesario traspasarlos a la tarjeta de memoria.

Puede usar el mismo método para copiar sus archivos en la tarjeta de memoria o dispositivo. Después de realizarlo, conecte su dispositivo de almacenamiento externo al ordenador. A continuación, comience a copiar los archivos en la carpeta que desee.

- 1. Seleccione para encontrar los archivos en su dispositivo
- 2. Seleccione los archivos o carpetas que quiere copiar→ seleccione a

continuación "copiar".

3. Seleccione para volver al almacenamiento interno del PC → seleccione la carpeta de la tarjeta→ seleccione "Pegar".

Borrar archivos

Haga clic y mantenga pulsado el archivo o carpeta. Pulse Borrar y después Aceptar.

21. Música

☆ Compatible con formatos de audio: MP3, WMA, OGG, FLAC, WAV, ACC
Reproducir música



- 1. Haga clic en el icono
- 2. De todos los álbumes/artistas/directorios/favoritos/listas de reproducción, seleccione lo que desee reproducir.
- 3. Seleccione "pista anterior" \rightarrow parar \rightarrow siguiente canción
- 4. Mientras reproduce música, puede volver al escritorio presionando Volver o Inicio



☆ Haga clic en las imagen de la esquina superior derecha en el reproductor de música, en el interfaz que se muestra a continuación:



22. Vídeo

★ Soporta: AVI, WMV, RM, RMVB, 3GP, MKV, MP4, ASF, VOB, MPG, MOV hasta 1080P HD.

Reproducir vídeos



- 1. Seleccione el icono $\xrightarrow{\text{Media Player}} \rightarrow \text{haga clic en un grupo de vídeos.}$
- 2. Seleccione el vídeo que desea visualizar.
- 3. Haga clic en el vídeo.
- 4. Pulse la tecla de Volver para regresar a la interfaz de Vídeos



23. Galería de imágenes

Soporta: JPEG, BMP, GIF, PNG



- 1. Seleccione el icono galería.
- 4. Seleccione para reproducir todas sus imágenes. Seleccione también el modo: normal, clásico, pasión, romántico, divertido...
- 5. Seleccione para elegir el color de sus imágenes.
- 6. Seleccione para elegir el tiempo de duración de presentación de sus imágenes.
- 7. Seleccione para cambiar el nombre de la imagen.

Borrar imágenes


- 1. Selección múltiple
- 2. Eliminar
- 3. Ajustes de fondo de escritorio

24. Mapas

☆ Para utilizar esta aplicación debe estar conectado a internet.



☆ Después de conectarse a la red, seleccione el icono abrirán el mapa y su localización automáticamente.

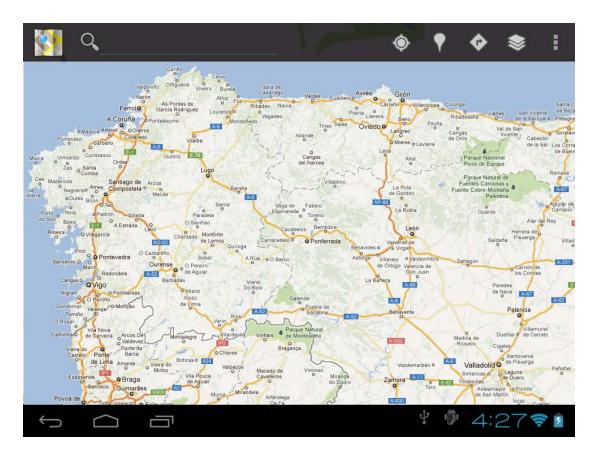



25. Búsqueda local

Similar a la función de Mapas.



26. Google Play

- Abra Google Play para descargar aplicaciones.
- Cuando abra por primera vez Google Play, tendrá que registrarse introduciendo los datos de su cuenta GMAIL (si no dispone de una cuenta de correo electrónico de GMAIL, puede solicitarla en http://gmail.google.com).



27. Ajustes

	T		
	Wi-Fi	Abrir Wi-Fi	
		Configuración y gestión de puntos de acceso de	
Redes	Ajustes de Wi-Fi	conexión inalámbrica.	
inalámbricas	Modo vuelo	Inhabilitar toda conexión inalámbrica.	
	Configuración de		
	redes 3G	Configuración de red 3G	
Red Ethernet		Configuración de red Ethernet.	
Seleccionar		Seleccionar ADSL como red, introducir nombre de	
ajustes		usuario y contraseña para usar esa red.	
	Memoria USB	Configuración de su dispositivo USB para	
USB	Memoria 03b	aprovechar el máximo de memoria disponible.	
	ADB	Configure su USB para ADB	
		Excepto las aplicaciones multimedia y la alarma,	
	Modo silencio	todos los sonidos se pueden silenciar.	
		Ajustar el volumen de elementos multimedia,	
		despertador. Haga clic y deslice la barra hacia la	
	Volumen	izquierda o hacia la derecha y seleccione Aceptar.	
Sonido	Tanaa	Calabiana las tamas que dassa mana anda uma da	
	Tonos de	Seleccione los tonos que desee para cada una de	
	notificación	las funciones del dispositivo.	
	Selección sonora	Reproducir sonidos cuando se realiza una	
		selección de pantalla.	
	Bloqueo de	Reproducir sonidos al bloquear y desbloquear la	
	pantalla	pantalla.	

	Brillo	Haga clic y deslice hacia la izquierda o derecha para ajustar el brillo de la pantalla y confirme con Aceptar	
	Pantalla giratoria	Cuando gire el dispositivo, la pantalla se ajustará a la dirección en la que esté colocado, sea vertical u horizontal.	
Pantalla	Reposo	Ajustar el estado de reposo del dispositivo.	
	Tiempo de espera	Ajustar el tiempo de retraso antes de que la	
	de pantalla	pantalla se apague automáticamente.	
	Ajustes de bloqueo de pantalla	Use el icono .PIN o una contraseña para bloquear el dispositivo.	
	Visualizar contraseñas	Puede visualizar sus contraseñas una vez que las haya introducido.	
	Seleccionar un administrador del dispositivo	Añadir o seleccionar un administrador del dispositivo.	
Seguridad	Utilizar certificado de seguridad	Permite utilizar certificados de seguridad con programas y aplicaciones.	
	Instalar desde tarjeta TF	Instalar criptográfico. Certificado desde tarjeta TF	
	Ajustes de	Modificar o revisar los certificados de contraseña	
	contraseña	almacenados.	
	Eliminar	Borrar toda la información sobre almacenamiento de certificados y restablecer contraseñas.	
	Orígenes	Permitir la instalación de aplicaciones distintas a	
	desconocidos	Google Play.	
Aplicaciones	Administración de aplicaciones	Administrar y eliminar aplicaciones instaladas.	
Apricaciones	Servicios en		
	ejecución	Ver y controlar los servicios en ejecución.	
	Desarrollo	Establecer opciones de desarrollo de aplicaciones.	
Privacy	Restablecer datos	Haga clic en eliminar todos los datos del dispositivo. Haga clic en reiniciar el dispositivo, o seleccione para cancelar y volver a la pantalla de inicio. iAdvertencia! A continuación se borrarán los	
-	de fábrica	siguientes datos: ~ Cuentas de Google ~ Ajustes del sistema y los datos de las aplicaciones	

		~ Descargar aplicaciones	
		Los siguientes datos no se borrarán:	
		~ El software del sistema y su aplicación.	
		~ Los documentos almacenados en la tarjeta SD	
		tales como música y fotos.	
	Capacidad total,		
	capacidad	Aparecerá cuando inserte su tarjeta TF.	
	disponible		
Almacenamient	Desinstalar	Cuando introduzca la tarjeta TF, puede seleccionar	
0	tarjeta TF	desinstalar la tarjeta TF o instalar.	
	Formatear tarjeta		
	TF	Formatear (borrar) tarjeta TF	
	Seleccionar un	De acuerdo con su ubicación, puede elegir el	
	idioma	idioma que corresponda.	
Idioma y			
teclado	Teclado Android	Configuración del teclado en pantalla,i.	
	Diccionario del	Los usuarios pueden agregar palabras al	
	usuario	diccionario de usuario.	
Configurar			
	fecha	Configurar fecha	
	Seleccionar la		
	zona horaria	Seleccionar la zona horaria	
Fecha y hora	Configurar hora	Configurar hora	
	Formato 24 horas	Puede elegir usar el formato de 12 o 24 horas	
	Elegir el formato	Puede elegir el formato de presentación de la	
	fecha	fecha	
		Comprobar el estado de los mensajes, el uso de	
Sobre el equipo		energía, información legal, modelo, versión	
Sobie ei equipo		Android, versión del KERNEL y el número de	
		serie/versión.	

Apéndice: accesorios opcionales y modelo

Accesorio	Modelo	
	TD-SCDMA	
		E230, E176G, E160E,
		E182G, E1782, E1750
	WCDMA	ZTE MF633BP-1,
Módem 3G		MF633, MF637U.
	EVDO	E150, EC1231, EC122,
		EC156 EC1270,
		ZTE AC580, ZTE AC2736,
		AC2746.

ENGLISH

Contents	29
Tips	30
1. Appearance	31
2. Power switch usage	32
3. Touch screen	32
4. Adapter cable	32
5. TF card usage	33
6. Getting started	33
Charging the device	33
Battery management	34
Start-up	34
Wi-Fi network settings	34
7. Desktop	36
8. Locking desktop	37
9. Programs	39
10. Desktop menu function	40
11. Program Manager	40
Installing programs	40
Downloading applications from Internet directly	40
Uninstalling the application	41
12. Sound recorder	42
13. Clock	42
14. Downloads	43
15. Browser	44
16. Calendar	45
17. Camera	45
18. Calculator	46
19. E-mail	
20. File Manager	48
Copying files between PC and the device	49
Deleting files	49
21. My music	50
22. My video	50
23. Gallery	51
24. Maps	51
25. Local search	52
26. E-market	
27. Settings	53
Appendix: Optional accessory and model	55

Tips

When you use this device, please follow the safety notice below to prevent fire, electric shock and injury.

- Keep the device away from rain and moisture.
- Keep the device away from direct sunlight and heat source.
- Protect the power cord. When connect the power cord, do not step onto it or place any object on it, which may cause extrusion. Protect the connector of the power cord connected devices specially.
- Please use the original power adapter for charging. Nonconforming chargers may cause harms.
- Do not disassemble the shell or repair it without authorization.

Cleaning

Handle the screen gently. To clear the fingerprints or dust on the screen, use soft cloth dedicated for camera lens instead of gauze.



2. Power switch usage

Turning on: Press and hold the power switch for five seconds

Turning off: Press and hold the power switch for five seconds – Tap Turn Off – Tap

OK

Screen locking/unlocking: Press the power switch to lock/unlock the screen.

Force shut-down: If the device doesn't have response, press the Reset key to restart the device.

Note: Do not force shut down the device unless necessary. Under normal condition,

please follow the normal procedure to turn off the device.

Reset key: Press the Reset key to restart the device.

3. Touch screen

The operation of touch screen is fast, easy and convenient.

The User Instructions guide you to operate the touch screen as follows:

Tap: Tap to select an icon or option.

Tap and hold: Tap and hold an icon to drag it to the desktop.

Drag and drop: Drag and drop on the desktop to switch among different interfaces.

★ To avoid scratching or breaking the screen, do not put any object on it.

4. Adapter cable

To use USB storage device, it is required to connect the adapter cable and then connect to PC.



USB cable

USB flash drive

Connect one end of the OTG cable to the flash drive and the other end to the USB OTG interface of the device. You can use the flash drive when it is ready.


☆ Do not insert/remove the USB flash drive frequently, or else it may

5. TF card usage

★ The device supports memory card up to 32GB.

Insert the memory card into the slot, press with fingers to clamp it; the screen will show **Preparing SD card**, and the TF card is ready for use when the characters disappear. You can operate when the card is ready.

Removing TF card



- ★ Do not insert/remove the memory card repeatedly, or else it may damage the card.
- ★ Please use qualified memory card to avoid incompatibility.

6. Getting started

Charging the device

Connect one end of the power adapter to the socket and the other end to the power jack to charge the device.

During charging, the battery symbol is **\sum_**; after charged, the battery symbol



- ★ You can use USB cable to charge the device.
- ★ You can use the device while charging; however, it will extend the charging time.

Battery management

The battery electricity isn't full when it is packed. It is recommended to charge at least four hours before using the device.

The charging time and discharging time of the battery are limited. However, you can try the following measures to extend the life of the battery.

- Use the device at least once every week.
- Charge the battery regularly.
- Do not keep the battery too low for long time.

Always keep the device and battery away from heat source.

Start-up

Press and hold the power switch for five seconds.

Wi-Fi network settings

Since many functions require Wi-Fi connection, please configure the Wi-Fi network before operation.



- 1. Click Settings → Wireless and network.
- 2. Select to turn on Wi-Fi.

The device will automatically scan and list all available Wi-Fi networks. If

the Wi-Fi connection has icon, you need to enter the valid password.

- 3. Tap a Wi-Fi connection \rightarrow if password is required, please enter the valid password \rightarrow tap Connect, and the after connecting to Wi-Fi network.
- 4. Tap to return to the desktop.
- ★ If you set to hide Wi-Fi, it won't be scanned automatically. Please tap Add Wi-Fi Network, and then enter corresponding information to add the Wi-Fi.

3G network settings

1. To connect to 3G network, please select the 3G Doogle that the device supports. The device only supports external USB 3G Doogles. The 3G

support list can be found in \longrightarrow Wireless and network \rightarrow More \rightarrow 3G support.



- 2. After installing the SIM card into the 3G NIC, install the 3G NIC to the USB OTG cable and then connect to the device;
- 3. After connecting to the 3G NIC, tap \longrightarrow Wireless and network \rightarrow More \rightarrow Mobile network to perform 3G Internet access settings.
- 4. Turn on the mobile network and select **Enabled data flow** → **Data roaming,** then select **APN**, enter and select **Menu key**: create new APN for Internet access. For China Unicom 3G Internet access, please set as follows:

Name: 3GWAP / APN: 3gnet / Proxy: Not set/ Port: 80 / Username: Not set/ Password: Not set / Server: Not set / MMSC: Not set / MMC proxy: Not set / MMC port: Not set / MCC: 460 / MNC: 01/ Authentication type: Not set / APN


type: Not set / APN type: Not set

Connect to 3G network after setting; the connecting to 3G network.

symbol appears on the screen after

If the symbol is grey, it is scanning the network; blue symbol indicates that the network is connected, and the symbol indicates data transmitting.

7. Desktop

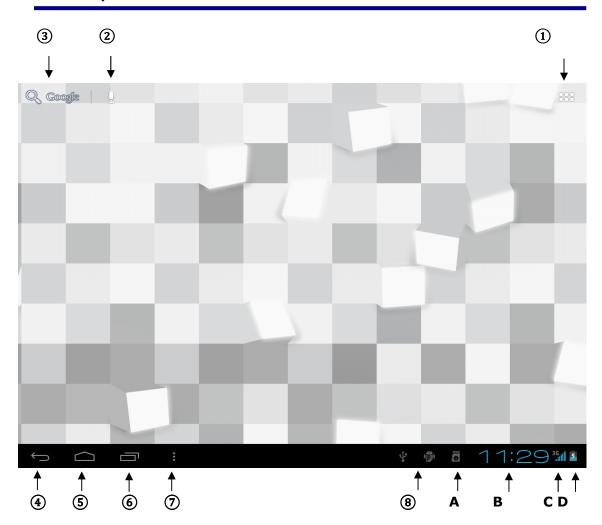


- 1: Tap to view all applications
- (2): Voice search shortcut
- (3): Browser shortcut
- 4: Return to current operation
- 5: Return to desktop directly from the program interface
- **6**: Multipage task selection key
- (7): Menu function shortcut
- **8**: USB connection symbol
- A: TF card connection status
- **B:** Current time
- C: 3G/WIFI connection signal symbol
- **D: Battery status**
 - ★ Tap any application icon to run it.
 - ★ Tap and hold the icon to drag and drop to other position on the screen.



★ Tap and hold the icon to drag and drop to the desktop.

8. Locking desktop

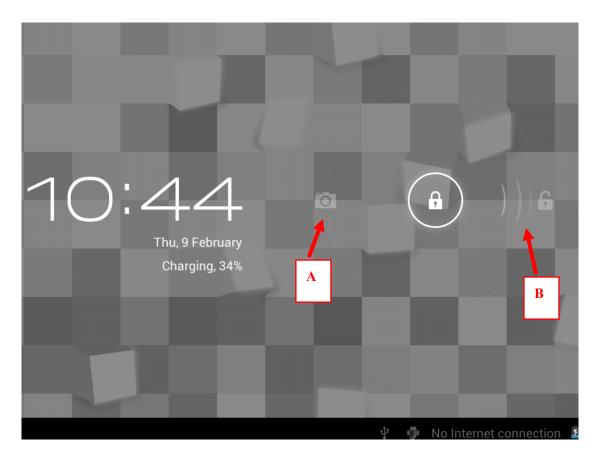

If the PC won't be used for a long time, or the power switch is tapped, the device enters standby state. The standby has two states. One is deep-sleep standby, in which the screen is turned off; the other is light standby after pressing the power switch. The picture shows the default light standby state. Tap and hold the unlocking

, and the A, B symbols as shown in the picture appear; point A is the camera icon and point B is the unlocking icon. The system will prompt about the path of unlocking. The ripple at point B in the picture is the path of the prompt. Tap and drag the unlocking switch to point B to unlock the screen, tap and drag the unlocking switch to point A to activate the camera function.

9. Programs

Gravador de som	Recorder	Record external sound	
Clock	Clock	Display time and set the clock	
Downloads	Downloads	Install the downloaded applications quickly	
Browser	Browser	Connect to Internet browser	
Calendar	Calendar	Set the calendar of the event	
Camera	Camera	Take pictures	
- + Calculator	Calculator	Do simple arithmetic	
Email	E-mail	Send and receive e-mail with existing e-mail address	
File Manage	File Manager	View and manage files and programs. Install Android applications and back up files in SD card.	

Music	My Music	Play and manage music files	
Media Player	My Video	Play and manage video files	
Gallery	Gallery	Browse and manage picture files	
Maps	Мар	Connect to the Internet and view current position in the map	
Places	Local Search	Connect to the Internet and view the information of the facilities near current position	
Play Store	E-market	Log in and download system application	
Search	Search	Enter the desired data directly	
Settings	Settings	Perform personalized setting	

- ★ Tap and hold the icon to drag and drop to other position on the screen.
- ★ Tap and hold the icon to drag and drop to desktop.

10. Desktop menu function

Manage apps

ow the menu list

System settings

and

Wallpaper

On desktop, tap the Menu key to show the menu list and perform the operation. At the same time, set common programs on desktop by tapping and holding the program icon to move to the desktop;

11. Program Manager

Installing programs

★ It is possible to download interesting and free Android applications. You just need to start the browser and search for "Android applications".

You can install the purchased or downloaded Android applications quickly



through

1. Copy desired .apk files to SD card or USB storage device \rightarrow insert the card into the device or connect USB flash drive to the device.



2. Tap the file manager icon File Manager



- 4. Select an .apk file \rightarrow **Install**. After the application is installed, the icon will appear in the interface that shows all applications.
- 5. Tap to run the application directly, or tap OK to return to the File Manager interface.

Downloading applications from Internet directly

You can download Android applications from the Internet directly, and install in the device quickly.

- 1. Click the icon to connect to the Internet.
- 2. Enter the URL and tap the download link of desired application.
- 3. After downloading, tap and hold the downloaded files (in download log interface), \rightarrow click Open \rightarrow Install.

Connecting to PC to save files

- 1. Connect the tablet PC to PC and the tablet PC can be used as mobile storage device; to connect to PC, connect one end of the USB cable to the USB OTG interface of the tablet PC and the other end to the USB interface of PC;
- 2. After connected, the tablet PC will prompt con and then select Turn on USB storage to transmit data between PC and tablet PC, as shown below:



Uninstalling the application

You can uninstall the Android application quickly.

- 4. Tap Menu key \rightarrow Settings \rightarrow Application \rightarrow Manage applications.
- 5. Tap an application → **Uninstall.**
- 6. Tap OK to uninstall.

12. Sound recorder



Click the sound recorder icon

The following interface appears



Tap to start recording, tap to stop the recording, tap to view the recording files, which will be named by time; select a recording file to play; tap to perform sound recording setting according to the prompt.



13. Clock

Tap the clock icon to view current date and time.

Alarm clock

You can set several alarm clocks at the same time.

★ When the icon appears in the upper status bar of the screen, at least one alarm clock is activated.

Adding alarm clock



- 1. Tap the clock icon
- 2. Press the Menu key \rightarrow Add alarm clock.
- 3. Set the alarm clock accordingly.
- ★ If you don't select Repeat, the alarm clock will be deleted automatically after the alarm time.
- 4. Tap Enable alarm clock.
- 5. Tap OK.

Turning off alarm prompt

When the alarm time is out, a window with the name of alarm clock will pop up.

If you want to repeat the alarm clock in 10 minutes, tap Snooze.

Tap Cancel to stop the prompt.

Enabling alarm clock

If you select Repeat in the settings, the alarm clock will be deactivated temporarily, but won't be deleted.

- 1. In the alarm clock interface, tap the lock interface, tap the lock.
- 2. Tap to re-activate the alarm clock.

Editing alarm clock



- 1. Tap the clock icon
- 2. Tap a desired alarm clock \rightarrow edit.

Deleting alarm clock



- 1. Tap the clock icon
- 2. Tap desired alarm clock and enter.
- 3. Tap Delete.

Tap to return to the desktop.

4. Downloads



3. Tap the download icon

4. View currently downloaded applications in PC, select and install.


15. Browser

You can connect to the Internet through the browser.



Tap the browser icon

on desktop to access the Internet:

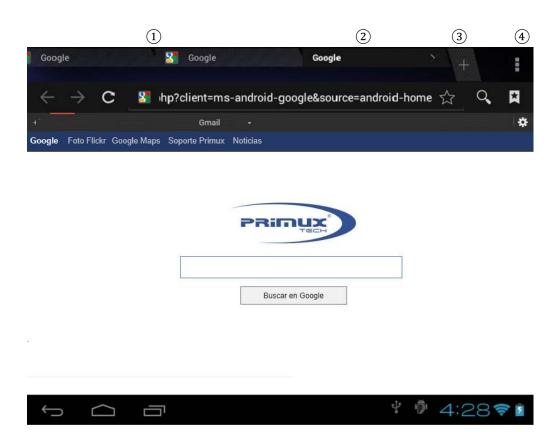

1): Previous web; select to view; 2): Current web; 3): Add web; 4): Menu key

16. Calendar



Tap the calendar icon

When the calendar is used for the first time, you need to add an Exchange account. Enter the e-mail address and password of the account, tap Next and follow the prompt the finish the account setting, and then the calendar is available.

New event

- 1. In the Calendar interface, tap the date you want to create an event.
- 2. Select the time \rightarrow enter the details in each field.
- 3. Tap OK.
- 4. Tap the Menu key to select desired calendar interface.
- ☆ The dates displayed in grey have events.



17. Camera


Tap the camera icon camera to turn on the camera and the interface



Taking pictures

- 1. In the camera interface, tap to take pictures.
- 2. The pictures will be saved automatically.
- 3. Tap the thumbnail of the picture to view the original in Gallery.
- 4. Press the Back key to return to the camera.
- 5. Tap the icon operform camera setting.

Recording video



- 2. Tap to start recording, and tap to stop recording.
- 3. The video files will be saved automatically.
- 4. Tap the video thumbnail to play the video.
- 5. Press the Back key to return to the camera.
- 6. Tap to switch to camera interface.
- 7. Press the key to perform settings for video recording.

Note: You can tap to switch between front camera and rear camera to take pictures and record video.



18. Calculator

- 4. Tap the calculator icon
- 5. Tap the figures and operators to calculate.
- 6. Tap Clear to delete one, or tap and hold Clear to clear all the results.



19. E-mail

★Support POP3 and SMTP accounts.

Adding e-mail account

You can enter one or several desired e-mail addresses on the device.



- 1. Tap the e-mail icon
- 2. In Your account interface, tap Next.

- 3. In e-mail address option, enter your e-mail address.
- 4. In password option, \rightarrow enter your e-mail password.
- 5. Tap OK.
- 6. Manual setting (optional): The server fills the supplier (i.e. gmail.com) automatically according to your e-mail account. However, if you need to change the server setting, click Manual setting to make necessary change.
- 7. Tap Next.
- 8. Optional: Enter the account name.
- 9. Enter the name of the message \rightarrow Tap OK.
- ☆ After setting, if you can't access a free e-mail account, please check with your e-mail service provider whether their server support POP and SMTP protocol.

Inbox



- 1. Tap the e-mail icon
- 2. If you only set one e-mail account, it will be opened directly. If you have set several accounts the account list will be displayed.
- 3. Tap desired e-mail account \rightarrow tap Inbox.

Opening e-mail

- 1. In the Inbox interface, tap and open an e-mail.
- 2. For attachment, tap Open to start respective application, or tap Save to save the attachment to SD card.
- 3. To Reply, tap Reply or Reply to all.
 - a) Write the message you want to send.
 - b) Tap Send to send the e-mail immediately; tap Drafts to save but do not send the e-mail, or delete directly but do not save or send.
- 4. To delete the e-mail directly, tap Delete.

Writing new e-mail

- 1. In Inbox interface, press the Menu key \rightarrow **Write.**
- 2. Tap Send to, and then enter the address of the recipient.
- 3. Or if you want to send a cc or bcc, press the Menu key \rightarrow Add cc and bcc, and enter the e-mail addresses of the recipients.
- 4. Enter desired subject in the title bar of the e-mail.
- 5. Tap Write option to enter your personal information.
- 6. If necessary, press the Menu key \rightarrow tap Add attachment to add the attachment file.
- 7. After writing, press the Menu key \rightarrow tap Send.

Editing e-mail account



1. Tap the e-mail icon

- 2. In the Inbox interface, press the Menu key \rightarrow tap Account setting.
- 3. Set your e-mail account accordingly.
- 4. Tap to return to the Inbox interface.

Deleting e-mail account

★ If you have several accounts and have deleted the default account, the next e-mail account in the list will be set to default automatically.



- 1. Tap the e-mail icon
- 2. In the Inbox interface, press the Menu key \rightarrow tap Account.
- 3. Tap and hold the account you want to delete.
- 4. In the popup Account option window, tap Delete account.
- 5. Tap OK to confirm the operation.

Setting default e-mail account

You should always have a default account. Therefore, if you have several e-mail accounts, you can set anyone to default.



- 1. Tap the e-mail icon
- 2. In the Inbox interface, press the Menu key tap \rightarrow Account setting.
- 3. Tap Default account to select it.

If you delete the default account, the next e-mail account in the list will be set to default automatically.



20. File Manager

Tap the file manager icon to view the files in all storage devices (*internal memory*, *SD card*, *USB storage*), and install Android applications to the device quickly.

The icons in the top of the screen have the following functions:



Internal memory



Your memory card



USB flash drive (needs adapter cable)



Back to previous folder



Create new folder



Set file content



Picture files

Copying files between PC and the device

You can copy files between external storage device, internal memory and the PC through File Manager. To copy files to the device, it is required to copy to SD card or USB storage device first.

- ★ The folder of the internal memory is "LocalDisk", the memory card is "sdcard", and the USB storage device is "udisk".
- ★ To copy files from SD card or USB storage to the device, you can copy the files to SD card or USB storage in the same way, then connect the storage device to PC and copy the files to your folder.
- 1. Tap or to show the files in your storage device.
- 2. Tap and hold the desired file or folder and tap Copy.
- 3. Tap the icon to return to the internal memory, tap the target folder and then tap Paste.

Deleting files

Tap and hold the file or folder, tap Delete and then tap OK to delete.

21. My music

☆ The compatible audio formats are: MP3, WMA, OGG, FLAC, WAV, ACC

Playing music



- 1. Tap My Music icon
- 2. Select desired music to play from the music/album/artist/playing list.
- 3. Tap Previous→ Pause → Next icon for operation.
- 4. To return to previous interface while playing music, tap or to return to the desktop.

Press the Menu key for music operation, as in the interface below:



22. My video

★ AVI, WMV, RM, RMVB, 3GP, MKV, MP4, ASF, VOB, MPG, MOV up to 1080P HD-Definition

Playing video



- 1. Tap My Video icon
- 2. Select desired video to play from the all/contents/my favorite/custom list.

- 3. Tap on the screen to adjust the video (including volume, pause/play, brightness, etc.)
- 4. Press the Back key or tap the icon to return to My Video interface.

23. Gallery

★ The compatible picture formats are: JPEG, BMP, GIF, PNG



- 1. Tap the gallery icon and then tap a picture group.
- 2. Tap a picture to browse.
- 3. Press the Back key to return to the picture group interface.
- 4. Tap the icon to play the lantern slides. The lantern slide modes include common, classic, dynamic, sweet, warm and party.
- 5. Tap to arrange the pictures by color
- 6. Tap to arrange the pictures by time.
- 7. Tap to arrange the pictures by name.


Enter a picture group, tap and hold a picture to enter multiple choices state, in which you can delete pictures and switch dynamic wallpaper

- 1. Multiple choices
- 2. Delete
- 3. Dynamic wallpaper switch

24. Maps

★ This function requires Internet connection.

After connecting to the Internet, tap the map icon to open your current position automatically; as shown below, you can search desired information;

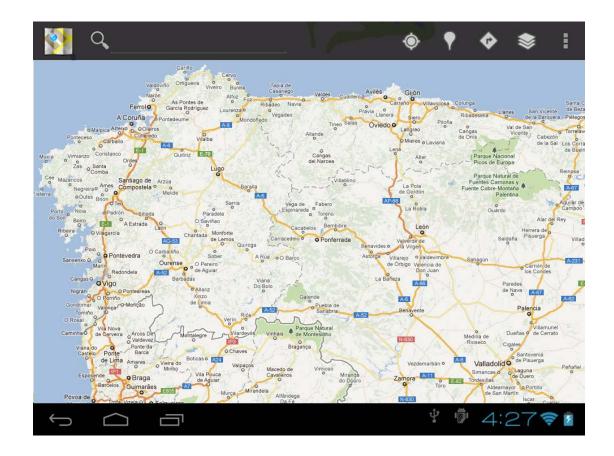



25. Local search

★ Similar to the map function, it can save a large number of environmental information



26. E-market

Turn on E-market to query and download applications.

When E-market is run for the first time, the system will ask to log in with GMAIL account (if you don't have a GMAIL account, please apply at http://gmail.google.com).

After downloading, install the applications.

27. Settings

Z7. Settings				
	Wi-Fi	Turn on Wi-Fi		
Wireless	Wi-Fi settings	Set and manage wireless access point		
and	Flight mode	Turn off wireless connection		
network	3G network			
	settings	Set 3G network		
Wired				
network		Configure wired network		
Dial-up		Access the Internet through ADSL dial-up. Enter		
setting		the username and password to connect		
USB	Mass storage	Configure USB to mass storage		
USB	ADB	Configure USB to ADB		
		All sounds are disabled except media and alarm		
	Silent mode	clock		
		Adjust the volume of media, alarm clock and		
		notification by tapping and dragging the slider		
	Volume			
Sound		, and then		
Souria		tapping OK		
	Notification	Select desired notification ringtone		
	ringtone	Select desired notification imptofie		
	Audible selection	Play sound when making screen selection		
	Screen lock			
	sounds	Play sound when locking and unlocking the scree		
		Adjust the brightness of the screen by tapping and		
	Brightness	dragging the slider , and then		
		,		
		tapping OK		
	Auto-rotate	Switch orientation automatically when rotating the		
	screen	device		
Screen time-out		Adjust the delay before the screen automatically		
	_	turns off		
	System	Adjust the delay before the system automatically		
Display	hibernate	hibernates		
	Set up screen			
Security	lock	Lock screen with a pattern, PIN, or password		
	Visible .			
	passwords	Show password as you type		
	Select device	Add or remove device administrators		
	administrators	Allow applications to the second seco		
	Use secure	Allow applications to access secure certifications		
	credentials	and other credentials		

Set password Set or change the credential storage password
Clear storage Clear credential storage of all contents and resits password. Unknown sources Manage applications Running services Development Factory data reset Factory data reset Factory data reset Factory data reset Clear credential storage of all contents and resits password. Clear credential storage of all contents and resits password. Manage and remove installed applications Manage and remove installed applications View and control currently running service Set options for application development Tap to clear all data in your device. Tap Rese reset the device, or tap to cancel return to previous screen Warning! This will erase all data from y device's internal storage, including: ~ Your Google account ~ System and application data and setting ~ Downloaded applications The following won't be erased: ~ Current system software and bundapplications ~ The files, such as music and photos
Clear storage its password.
Application Application
Application Manage applications Running services Development Set options for application development Tap to clear all data in your device. Tap Reservice reset the device, or tap to cancel return to previous screen Warning! This will erase all data from y device's internal storage, including: ~ Your Google account ~ System and application data and setting ~ Downloaded applications The following won't be erased: ~ Current system software and bundapplications ~ Total space.
Application Manage applications Manage and remove installed applications Running services View and control currently running service Development Set options for application development Tap to clear all data in your device. Tap Reservices the device, or tap reservice reset the device, or tap for an interest to cancel return to previous screen Total space. Privacy Factory data reset ~ Your Google account ~ Your Google account ~ System and application data and setting ~ Downloaded applications Total space. ~ Total space.
Applications Running services Development Set options for application development Tap to clear all data in your device. Tap Rese reset the device, or tap return to previous screen Warning! This will erase all data from y device's internal storage, including: ~ Your Google account ~ System and applications The following won't be erased: ~ Current system software and bundapplications Total space. Manage and remove installed applications View and control currently running service Set options for application development Tap to clear all data in your device. Tap Rese to cancel return to previous screen Warning! Total space.
Running services Pevelopment Set options for application development Tap to clear all data in your device. Tap Reservice reset the device, or tap to cancel return to previous screen Warning! This will erase all data from your device's internal storage, including: ~ Your Google account ~ System and application data and setting ~ Downloaded applications The following won't be erased: ~ Current system software and bundapplications ~ TF files, such as music and photos
Privacy Factory data reset Privacy Factory data reset Total space. Set options for application development Tap to clear all data in your device. Tap Reset Total space. Set options for application development Tap to clear all data in your device. Tap Reset Total space.
Privacy Factory data reset Factory data reset To following won't be erased: Current system software and bundapplications Total space. Total space. Total space.
Privacy Factory data reset the device, or tap to cancel return to previous screen Warning! This will erase all data from y device's internal storage, including: ~ Your Google account ~ System and application data and setting ~ Downloaded applications The following won't be erased: ~ Current system software and bund applications ~ TF files, such as music and photos
Total space.
TF card Display when TF card is inserted
and available space
storage Unmount TF card Unmount TF card to safely remove it
Format TF card Format (erase) TF card
Language Select language Select corresponding language according to y location
and Android keypad Screen keypad setting
Lear dictionary And words to user dictionary
Set date Set the date
Select time zone Select time zone.
Set time Set the time
Date and Use 24-hour
format User 24-hour format or 12-hour format
Select date
format Select date format
View status hattery usage legal informat
About device model number, Android version, kernel version and build version

Appendix: Optional accessory and model

Accessory	Model	
	TD-SCDMA	
	WCDMA	huawei E230, E176G,
		E160E, E182G, E1782,
		E1750
		ZTE MF633BP-1,
3G Wireless Modem		MF633, MF637U.
	EVDO	huawei E150, EC1231,
		EC122, EC156 EC1270,
		ZTE AC580, ZTE AC2736,
		AC2746.